Samsung SMART TV

SET-UP GUIDE

Unpack

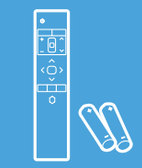

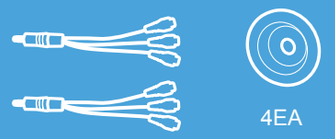

4EA

• Regulatory Guide
• 3D Active Glasses

Connect

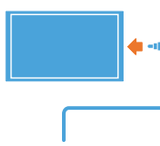

When you connect or disconnect the One Connect Mini cable, the TV reboots with a reboot warning message.

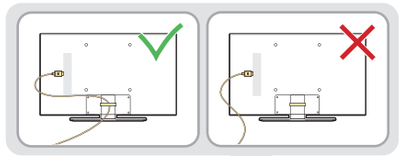

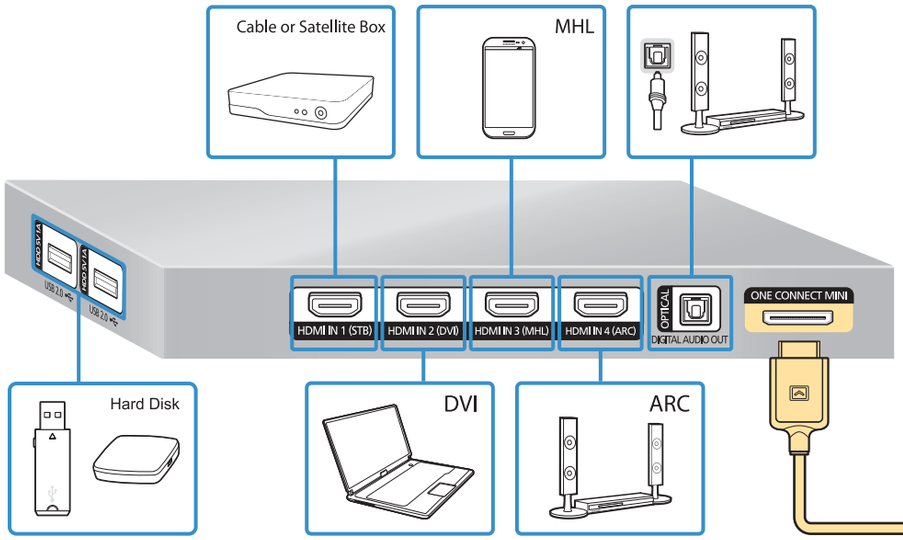

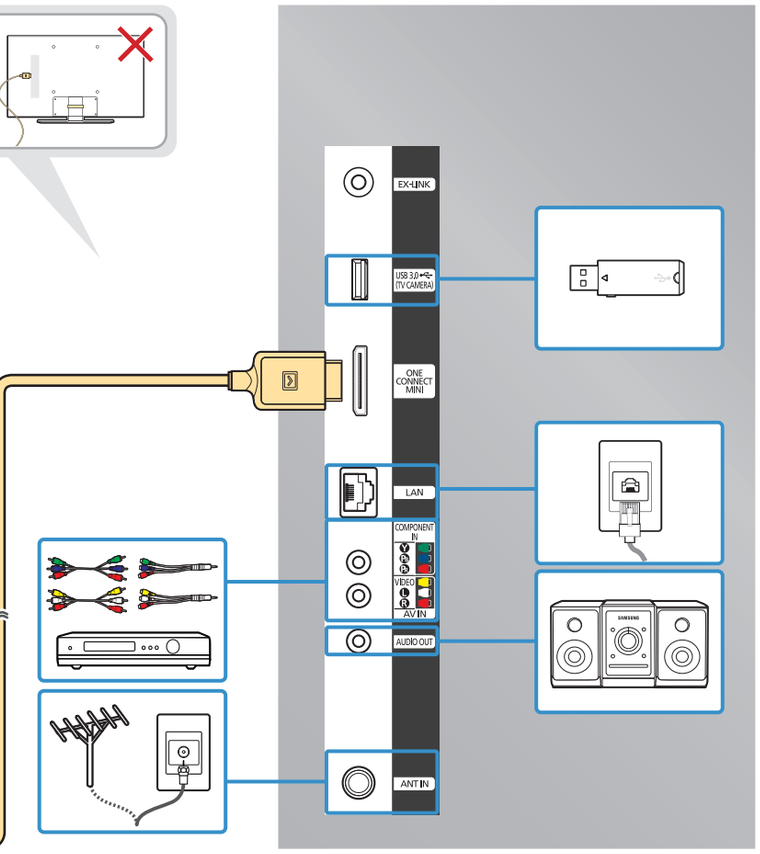

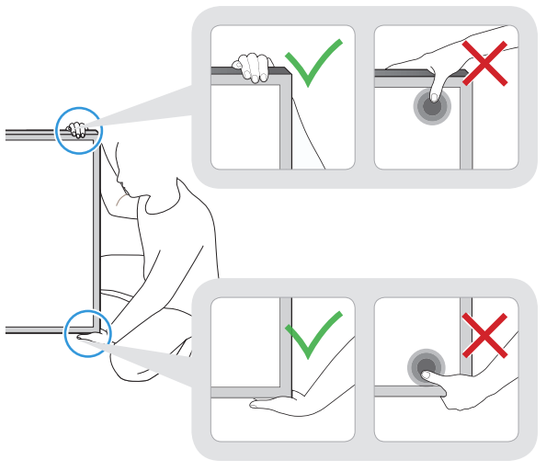

Initial Setup

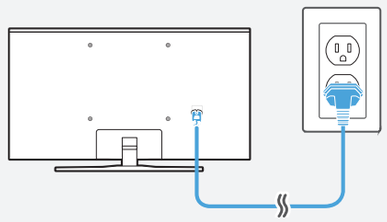

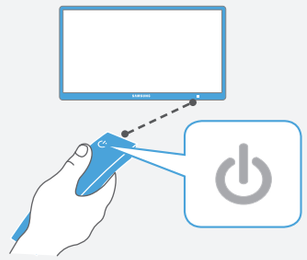

BN68-07054H-01